The **Phantom** template for:
PowerUp 3.0; PowerUp Free Flight (2.0)
Paper type - 80 to 100 GSM
Paper size - A4
Printer setting - Scale 100% borderless

Copyright © 2015 TailorToys L.L.C. All rights reserved. PowerUp® is a trademark of TailorToys L.L.C.

www.poweruptoys.com

Wing folding line



Elevator


POWER UP®

Rudder


Elevator

The **Phantom** template for: PowerUp 3.0; PowerUp Free Flight (2.0) Paper type - 80 to 100 GSM Paper size - A4 Copyright © 2015 TailorToys L.L.C. All rights reserved. PowerUp $^\circ$ is a trademark of TailorToys L.L.C.


www.poweruptoys.com

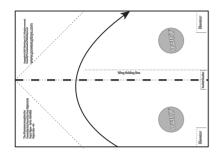


1. Start with the printed template face up. Fold in half, the lower edge to the top edge. Unfold.

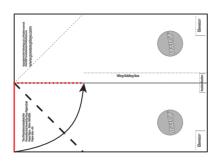


2. Make an Arrow Head by folding the left edge (mark in red) to the centre (red dotted line).

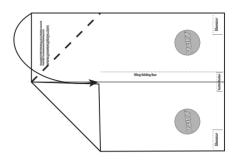


3. Repeat with the other corner.

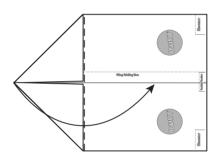


4. Fold the left corner to the right; refer to the base of the triangle as your guiding line.

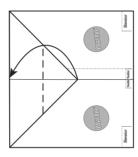


5. Fold the corner back to the left edge of the paper

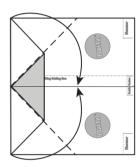


6. Fold both left corners to the center line, making another Arrow Head. Do not cross the small triangle layers (marked by grey)!

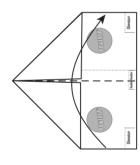


7. Fold the lower wing on top of the upper wing. Make sure they align perfectly.

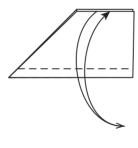

 
8. Fold the wing down along the printed dashed line. Unfold.



 9. Fold the wing tip to the last fold line you made, and unfold.



 10. Repeat steps 8-9 on the other wing.



11. Spread the wings; see the back view for the right angles.
Cut the elevators and rudder.
Your Phantom is ready!